

MIL-SPEC To Continental Cross Reference

* = insert number of contacts required.

MIL-SPEC	Continental	MIL-SPEC	Continental
M55302/60-B(*) F	UER-(*)MF-2- SF	M55302/63-B(*) L	UMR-(*)FM-2- KL
H	- KH	M	- KM
S	- KS	S	- KS
X	- XF	H	- KH
Y	- YF	X	- X
		Y	- Y
M55302/60-C(*) F	UER-(*)MF-3- SF	F	- SL
H	- KH	M55302/63-C(*) L	UMR-(*)FM-3- KL
S	- KS	M	- KM
X	- XF	S	- KS
Y	- YF	H	- KH
M55302/60-E(*) F	UER-(*)MF-4- SF	X	- X
H	- KH	Y	- Y
S	- KS	F	- SL
X	- XF		
Y	- YF	M55302/63-D(*) L	UMR-(*)FM-5- KL
		M	- KM
M55302/61-A (*)	URR-(*)FM-1- SF	S	- KS
-B	FM-2- SF	H	- KH
-C	FM-3- SF	X	- X
		Y	- Y
M55302/62-A(*) L	UMR-(*)MF-0- KL	F	- SL
M	- KM		
S	- KS	M55302/63-E(*) L	UMR-(*)FM-6- KL
H	- KH	M	- KM
M55302/62-B(*) L	UMR-(*)MF-2- KL	S	- KS
M	- KM	H	- KH
S	- KS	X	- X
H	- KH	Y	- Y
		F	- SL
M55302/62-C(*) L	UMR-(*)MF-3- KL		
M	- KM	M55302/64-A(*) X	UMR-(*)MF-0- X
S	- KS	Y	- Y
H	- KH	F	- SL
M55302/62-D(*) L	UMR-(*)MF-5- KL		
M	- KM	M55302/64-B(*) X	UMR-(*)MF-2- X
S	- KS	Y	- Y
H	- KH	F	- SL
M55302/62-E(*) L	UMR-(*)MF-4- KL		
M	- KM	M55302/64-C(*) X	UMR-(*)MF-3- X
S	- KS	Y	- Y
H	- KH	F	- SL
M55302/62-F(*) L	UMR-(*)MF-6- KL		
M	- KM	M55302/64-D(*) X	
S	- KS	Y	
H	- KH	F	
M55302/63-A(*) L	UMR-(*)FM-0- KL	M55302/64-E(*) X	UMR-(*)MF-5- X
M	- KM	Y	- Y
S	- KS	F	- SL
H	- KH		
X	- X	M55302/64-F(*) X	UMR-(*)MF-6- X
Y	- Y	Y	- Y
F	- SL	F	- SL